

SECURITYGUARD III

OWNER'S GUIDE

Congratulations on selecting FAI Home Security to protect your family and home.

Your SecurityGuard III with its "speak easy" technology is a revolutionary new radio based state of the art alarm system which has been built to the highest Australian and world quality standards.

Testimony to the sophistication and innovative design of the SecurityGuard III, are the many annunciation features as well as the wireless communication equipment linked to the central monitoring station. Your system is fully transportable so whenever you move, it moves with you!

Please read this Guide carefully as it is designed to give you a comprehensive yet simple understanding of how your SecurityGuard III works.



SG III

FAI BS90235

 **FAI HOME**
SECURITY
WORLDWIDE

CHECKING SMALL SENSORS (PIR)


IF YOUR PIR IS NOT WORKING THE SECURITYGUARD WILL GIVE YOU THE BELOW MESSAGE



TESTING YOUR SMALL SENSOR (PIR)


STEP 1

LEAVE ROOM
NO MOVEMENT
IN DETECTION AREA

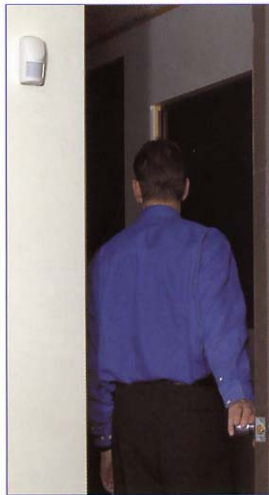

STEP 2


YOU MUST WAIT
5 MINUTES

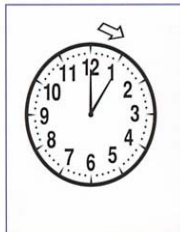

(BUILT IN
BATTERY SAVING
FEATURE)

STEP 3

RE-ENTER ROOM
RED LIGHT IN PIR
WILL FLASH

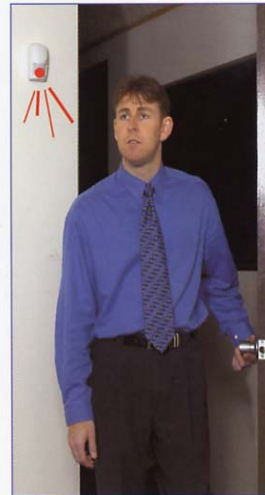

CHANGING YOUR SENSOR (PIR) BATTERY

9 VOLT LITHIUM BATTERY - LASTS APPROX 18 MONTHS



WIRELESS DIALER

YOUR WIRELESS DIALER AUTOMATICALLY SENDS A WEEKLY TEST SIGNAL AND ANY FAULT MESSAGES TO THE CENTRAL MONITORING STATION. IT IS VERY IMPORTANT TO ENSURE THAT YOUR WIRELESS DIALER IS ALWAYS CONNECTED TO THE PHONE AND POWER LINES. YOUR MAIN UNIT MUST ALWAYS BE CHARGED AND THE EMERGENCY OVERRIDE KEY BE IN THE ON POSITION.



CHARGE MAIN UNIT FOR 24 HOURS



CHANGING REMOTE KEY BATTERY


3 VOLT LITHIUM TYPE (CR2016) - LASTS APPROX 24 MONTHS



CHANGING LARGE REED SWITCH BATTERY

9 VOLT LITHIUM - LASTS APPROX 18 MONTHS


WARNING SOUND WILL BE HEARD WHEN OPENING CASE (THIS IS NORMAL)

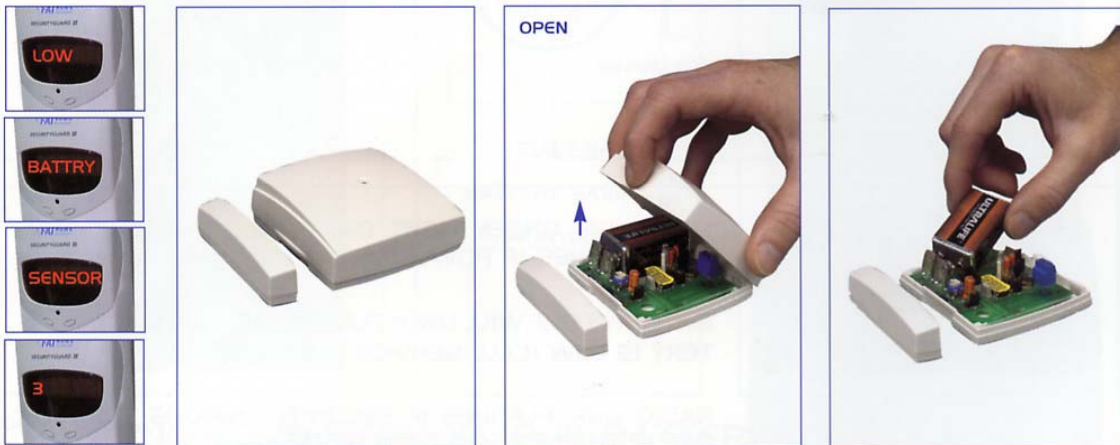

CHANGING MINI REED SWITCH BATTERY

3 VOLT LITHIUM TYPE (CR2477) - LASTS APPROX 18 MONTHS

WARNING SOUND WILL BE HEARD WHEN OPENING CASE (THIS IS NORMAL)

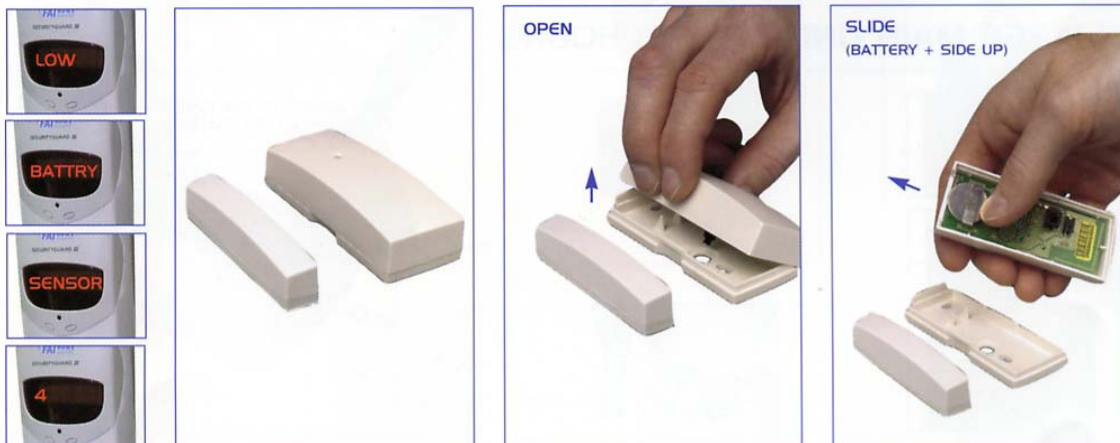

HOME MODE



=PROTECTED



=UN PROTECTED

ARMED

x1 PRESS ON

HOME (OPTIONAL)

x2 PRESS ON

HOME 2 (OPTIONAL)

x3 PRESS ON

DISARMED

x1 PRESS OFF

HOME MODES WILL ONLY WORK IF SENSORS ARE PROGRAMMED TO OPERATE IN "HOME MODES"
The number of PIRs used in the above example are only for explanatory purposes and are not required in every home.

EMERGENCY OVERRIDE KEYS

ONLY TO BE USED IF YOUR REMOTE KEY IS LOST OR STOLEN
KEEP THESE KEYS IN A VERY SECURE LOCATION (NOT WITH YOUR HOUSE KEYS)



CHANGING DOOR BELL BATTERY

3 VOLT LITHIUM BATTERY TYPE (CR2032) - LASTS APPROX 24 MONTHS



MAIN UNIT FUNCTION BUTTONS

SECURITYGUARD IS WORKING WHEN OK LIGHT FLASHES EVERY 5 SECONDS



SIREN/ BLUE STROBE



IF ALARM ACTIVATES WHILE YOU ARE AWAY

- SIREN SCREAMS 5 MINUTES
- STROBE FLASHES 1 HOUR
- WIRELESS DIALER SENDS SIGNAL TO MONITORING STATION

WHEN YOU ARRIVE HOME PRESS OFF BUTTON AND STROBE FLASHES 4 SECONDS AND SIREN BEEPS FOR 5 SECONDS

EMERGENCY OR PANIC BUTTON

PRESS AND HOLD THE EMERGENCY OR PANIC BUTTON FOR 2 SECONDS. ALARM WILL SOUND AND WIRELESS DIALER WILL RING CENTRAL MONITORING STATION



DISPLAYS



TO CLEAR ANY DISPLAY PRESS THE OFF BUTTON



TO RECALL DISPLAY PRESS THE OFF BUTTON (UNLESS ALREADY RESET BY PRESSING ON THEN OFF)



TROUBLESHOOTING

SYMPTOM	POSSIBLE CAUSE	REMEDY
Red alarm light does not always illuminate on PIR	Constant movement in room PIR is faulty	There must be no movement for at least 5 minutes in room, leave room for 5 minutes before re-entering to test Contact service number
PIR false alarming	Insects crawling on detector Air breezes caused by open windows Pets in detection area Sensitivity settings too high PIR faulty	Clear spider webs or spray around the detector with insect surface spray. Do not spray directly on PIR Do not leave any windows open near PIR's when alarm is armed Avoid having pets in areas protected by PIR's Contact service number Contact service number
Alarm will not turn on	SecurityGuard battery is low or dead Radio Key has flat battery	Plug in battery charger for at least 24 hours Replace battery in remote or try another remote
Remote key light does not illuminate when button pressed	Battery is low or dead Remote Key is faulty	Change battery and test Contact service number
Red light does not illuminate on reed switch	Battery is low or dead Reed switch is faulty	Replace battery and test Contact service number
Cannot enter Home mode	Incorrect Remote Key operation No home mode detectors programmed	Press on twice/three times within 3 seconds Home mode cannot be entered if there are no Home Detectors programmed
"Warning outside siren tamper"	Your external siren cover has an open tamper or your wiring is faulty	Check outside siren for damage. Call service number

